



Digital Temperature Controller

CONOTEC CO., LTD.

www.conotec.co.kr

FOX-2003



Model	Sensor	Output	Temp. range	Function
FOX-2003 (for cooling)	NTC	Relay (3EA)	-55.0 C ~ +99.9 C	COMP control Defrost control FAN control

※ Thank you for selecting our products. Please read carefully this instruction to reduce any damages or operation mistakes.

Part name



- 1 COMP output lamp
- 2 Defrost output lamp
- 3 FAN output lamp
- 4 Defrost switch
- 5 Setting up
- 6 Change function switch
- 7 Setting down

The function of each key.


- set** : A key to change of the programs & setting temperature.
- ▲ ▼** : A key to change of the program's set values & temperature.
- ☺** : A key for manual defrost
Press the **☺** key for more than 3seconds to operate or stop the manual defrost.

Detailed manual

- E81** : To change the set values for the temperature output.
- E82** : To change the set values for the defrost output.
- E83** : To change the set values for the FAN output
- HSP** : Setting function of the highest limit of temperature range
(Maximum set point allowed to the end user)
-Impossible to set up the set value more than **HSP** set value
ex) **HSP** = 25.0°C setting ⇒ impossible to raise the set value more than 25°C
- LSP** : Setting function of the lowest limit of temperature range
(Minimum set point allowed to the end user)
-Impossible to set up the set value less than **LSP** set value
ex) **LSP** = 10.0°C setting ⇒ impossible to lower the set value less than 10.0°C
- dIF** : Selection of the temperature deviation


P : + deviation (in the set point ⇒ off)

ex) setting=10.0°C, **dIF** : 5.0



Pn : ± deviation


ex) setting=10.0°C, **dIF** : 5.0



- dIF** : Setting for temperature deviation
- In the ON/OFF control, it needs at regular interval between ON and OFF.
- By operating the ON/OFF control frequently, the relay or its output contact can be damaged quickly and it also occurs the hunting(oscillating, chattering) by virtue of external noise. You can make use of the temperature deviation in order to protect its relay or contact and so on.

「 ex ⇒ The method of the temp. deviation when ON/OFF control 」

- present temp. > setting temp.+ temperature deviation
→ output ON
- present temp. ≤ setting temp.
→ output OFF

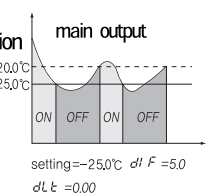


- dLt** : Delay time of the output
It is widely used as the followings
- in case of operating the ON/OFF control very often,
- to protect the operation machinery when re-input of the power supply or momentary stoppage of power supply




ex) if the set value is 1.30, from until time → the relay is ON in the point after as delay as the setting time(1min.30sec.). (flickering the output lamp during the **dLt** time)

- Cor** : Correction of the present temperature.
- It is used for the correction of a discrepancy between the display temperature and real temperature
ex) real temp. : 10.0°C → **Cor** : 0.0 ⇒ -2.0 correction → 10.0°C display
- SEr** : setting for the COMP output while sensor's error continuous ON continuous OFF
- LoC** : The lock function
- As a safety device, it is used in order not to change the set values except for the main user.
ON- setting for the lock function.
OFF- removal for the lock function
- dLp** : The selection of the COMP when defrosting
Con : COMP ON when defrosting
CoF : COMP OFF when defrosting

Setting temperature

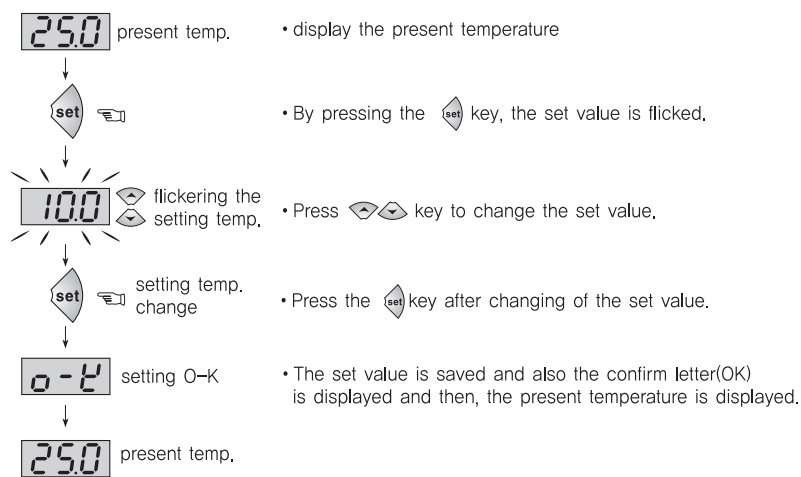

Setting for programs

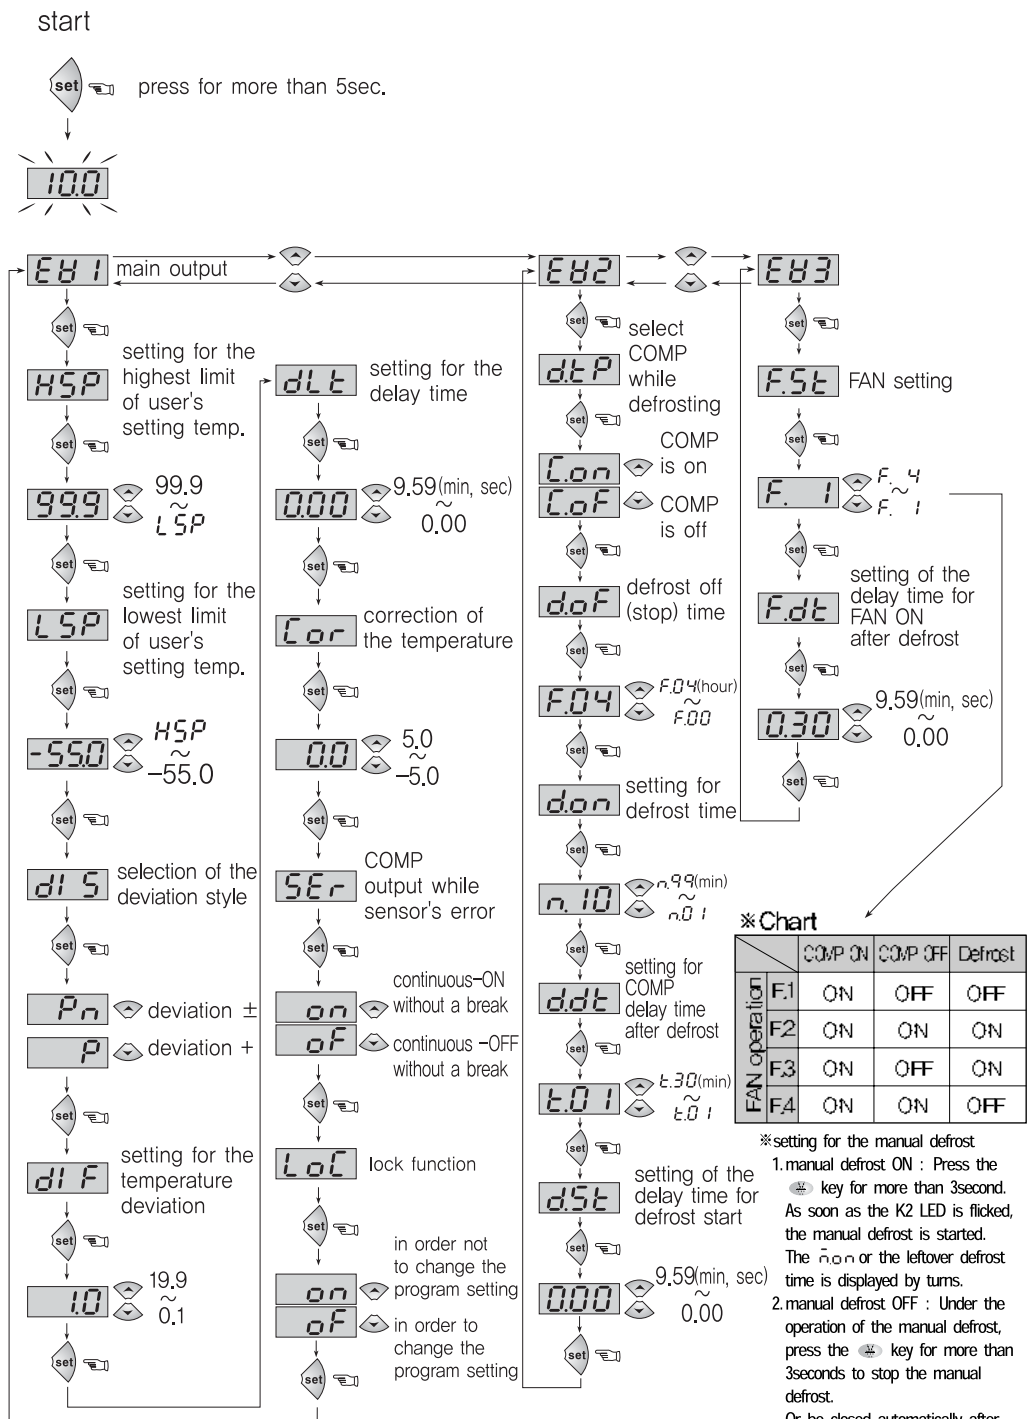


※ Chart

FAN operation	COMP ON	COMP OFF	Defrost
F1	ON	OFF	OFF
F2	ON	ON	ON
F3	ON	OFF	ON
F4	ON	ON	OFF

※ setting for the manual defrost
1. manual defrost ON : Press the **☺** key for more than 3second. As soon as the K2 LED is flicked, the manual defrost is started. The **don** or the leftover defrost time is displayed by turns.
2. manual defrost OFF : Under the operation of the manual defrost, press the **☺** key for more than 3seconds to stop the manual defrost. Or be closed automatically after **don** time


※ To change it with program mode, press the **set** key for more than 5 second in the present temperature display mode.
※ The set or programming mode is terminated, if you press the **set** key for 2 second, parameters(set values) are saved after the display shows OK letter or return to present temperature automatically after 30 second.

13. **dof** : Defrost stop time
 - Setting range $F.00 \sim F.48$ hour
 - Start the defrost if a cycle of the defrost
14. **dof** : Defrost time
 - setting range $n.01 \sim n.99$ min
 - Operate the defrost while defrosting time.
 ex) $dof : F.04$ (4hours), $dof : n.10$ (10minute) setting

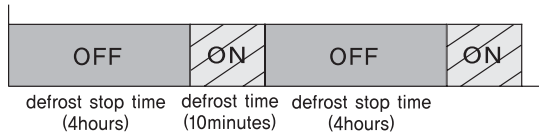


※ repeat the defrost operation for 10 minutes every 4 hours

15. **ddt** : Delay time of the COMP after defrost
 - setting range $t.00 \sim t.30$ min
 - COMP output is ON : after as delay as the setting time after closing of the defrost
 ex) $ddt : t.01$ (1minute)




16. **d5t** : the delay time for defrost start
 - setting range $0.00 \sim 9.59$ (minute, second)
 - COMP output is ON : after as delay as the setting time before operating of the defrost
 ex) $d5t : 0.10$



17. **F5t** : FAN setting ($F.1 \sim F.4$) ⇒ Pls refer to the chart in the program mode


18. **Fdt** : Delay time of FAN ON after defrosting
 - setting range $0.00 \sim 9.59$ (minute, second)
 ex) $Fdt : 0.30$ (30seconds)

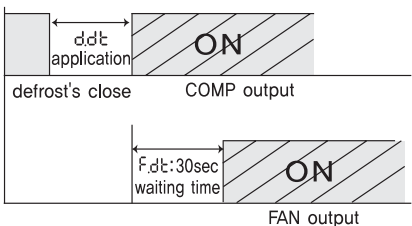


■ Temp. range & set value when deliver

Setting temp.	Function	Display	Range	Set values when deliver	Remarks
Setting temp.	Setting temp.		-55.0~99.9	10.0	
Program Setting	Setting for the highest limit of user	HSP	LSP~99.9	99.9	It is irrelevant to the relay output.
	Setting for the lowest limit of user	LSP	-55.0~HSP	-55.0	It is irrelevant to the output relay.
	Selection of the deviation style	d1S	P/Pn	P	Pn - deviation ± P - deviation +
	Temperature deviation	d1F	0.1~19.9	1.0	
	Delay time	d1t	0.00~9.59	0.00	(minute, second)
	Correction of temp.	Cor	-5.0~5.0	0.0	correct for an discrepancy between the display temp. and real temp.
	Sensor's error	SEr	on/of	oF	on - COMP ON oF - COMP OFF
E82	Lock functionon	LoC	on/of	oF	oP - setting for the lock function oF - removal of the lock function however, except for the setting temperature value.
	Selection of the COMP while defrosting	d5P	Con/CoF	CoF	Con - COMP ON while defrosting CoF - COMP OFF while defrosting
	Defrost stop time	dof	F.00~F.48	F.04	hour
	Defrost time	dof	n.01~n.99	n.10	minute
	Delay time of the COMP after defrosting	ddt	t.00~t.30	t.01	minute
E83	Delay time of operating for defrost	d5t	0.00~9.59	0.00	(minute, second)
	FAN setting	F5t	F.1~F.4	F.1	※Refer to the Chart
	Delay time of the FAN ON after defrosting	Fdt	0.00~9.59	0.30	(minute, second) ※Delay time of the COMP after defrosting


■ Relay junction

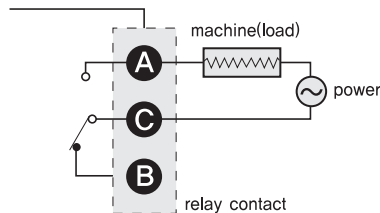

■ Connection

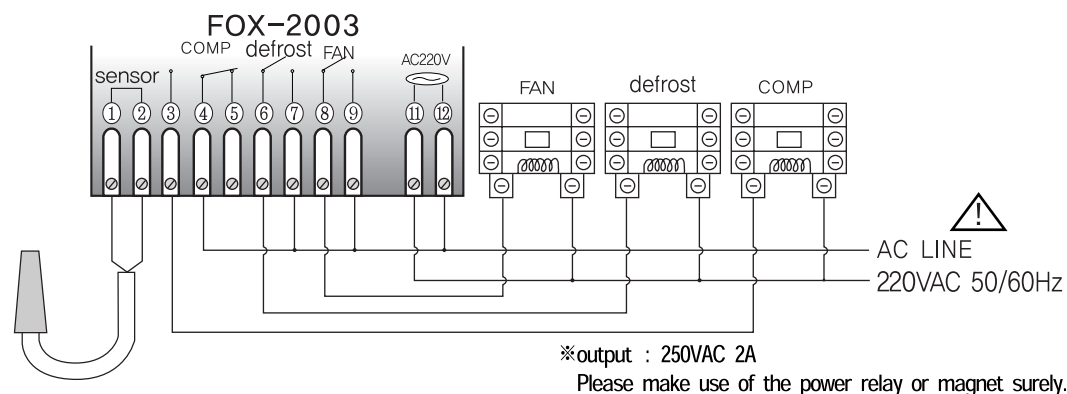

■ Dimension

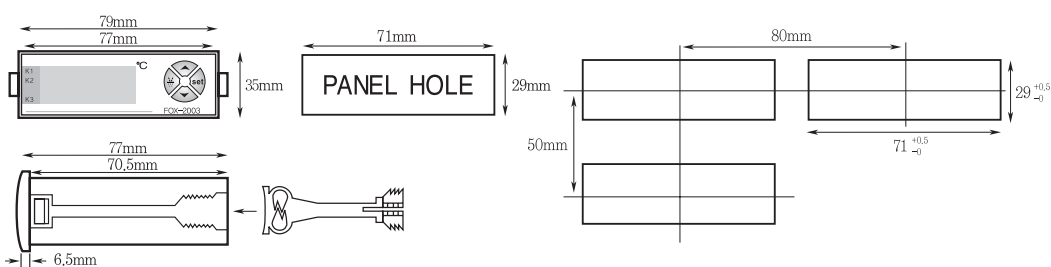

■ Safety and Hazard Instructions

⚠ Safety

Pls use this item after installing the duplex safety device in which is applied at dangerous factors such as serious human injury or serious damages of property & important machine because this item is not designed as safety device

⚠ Safety Instruction and Hazard Warnings

- Please read the operating manual through completely before putting the device into operation.
- We will not assume any responsibility for damage to assets or persons caused by improper handling or failure to observe the safety instructions or hazard warnings.
- For safety and licensing reasons, unauthorized conversion and/or modification of the device is not permitted.
- Do not exceed the maximum permissible current - in case of higher loads, use a contactor of adequate power. Make sure that the supplied voltage matches the values specified for the instrument.
- The device must be adequately protected from water and dust as per the application and must be accessible via the use of appropriate tools
- The device must not be exposed to extreme temperature, sunlight, strong vibrations or high levels of humidity.
- Operation or installation is not permitted under unfavorable ambient conditions such as wetness or excessive induction loads or solenoid and dust, combustible gases, vapors or solvents, especially high-frequency noise
- Avoid operation or installation close to high-frequency fields such as welding devices, sewing machines, wireless transmitter, radio systems, SCR controller, etc
- Do not install the sensor cable nearby signal cable, power cable, load cable
- Please use the shield cable when the sensor cable's lengthen, however do not make it too much longer
- Please use the sensor cable without any cutting or flaw, blemish.
- The device is not a toy and should be kept away from children
- Installation work must only be carried out by suitably qualified personnel who are familiar with the hazards involved and with the relevant regulations.
- You shouldn't tinker with anything or the product may not be opened or disassembled unless you know what you're doing. Please ask us about this questioning

⚠ Danger

Attention ! Never work on electrical connections when the machine is switched on

⚠ Error message

E r i Memory error. Turn the power off and turn it on again

If the error message persists, please request us A/S by return

o - E Sensor error. The sensor is interrupted. Check the cable,

S - E Sensor error. The sensor is short-circuited. Check the cable


■ The terms of guarantee : for one year from the date of purchase

■ Model & output spec.

	2001 (sensor : 1EA)	2001D (sensor : 1EA)	2001T (sensor : 1EA)	2001F (sensor : 1EA)	2000TT (sensor : 1EA)	
temp. output	one-stage output	two-stage output	three stage output	four-stage output	control by the temperature & time (for greenhouses)	
	2001 (sensor : 1EA)	2002 (sensor : 1EA)	2003, 2003S (sensor : 1EA)	2004 (sensor : 2EA)	2005 (sensor : 2EA)	2006 (sensor : 2EA)
temp. output	○	○	○	○	○	temp. 1 ○ temp. 2 ○
alarm output	-	○	-	-	○	alarm 1 ○ alarm 2 ○
defrost output	-	-	○	○	○	-
FAN output	-	-	○	○	○	-

■ ex) application

- Cooler → turn off at 0.0°C, turn on at 5.0°C, defrost output for 10minutes every 4 hour, FAN → turn on while COMP output, turn off while COMP OFF and defrosting
- How to operate(setting for the temperature & programs) ?

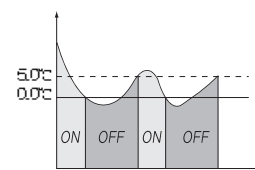

< setting temp. > (see the setting temperature)
 setting : 0.0°C

< setting program > (see the setting for program)

COMP setting

d1S : P (one side deviation, turn off at setting point)
 d1F : 5.0 (due to the on/off's interval → 5.0°C)

setting defrost

dof : F.04 (defrost stop time : 4hours)
 dof : n.10 (defrost time : 10minutes)

setting FAN

F5t : F.1
 COMP ON : FAN output → on
 COMP OFF / while defrosting : FAN output → off

※ The product's specification can be changed without any notification to improve its quality.

■ H. Office : 56, Ballyongsandan 1-ro, Jangan-eup, Gijang, Busan, Republic of Korea
 Factory : 56, Ballyongsandan 1-ro, Jangan-eup, Gijang, Busan, Republic of Korea

※ This device works proper operation with:
 Ambient temp. : 0°C~60°C
 Ambient humi. : below 80%RH
 Regular power : 220VAC

A/S TEL : +82-51-819-0426
 FAX : +82-51-819-4562

e-mail : conotec@conotec.co.kr
 URL : www.conotec.co.kr